


## ATB METERBRIDGE POWER CONNECTIONS FOR 'PILOT PROGRAM' CONSOLES AND THOSE WITHOUT CON 6 FITTED TO MASTER PCB (PC109)

The cable assembly required to connect power to the meterbridge is as shown below:

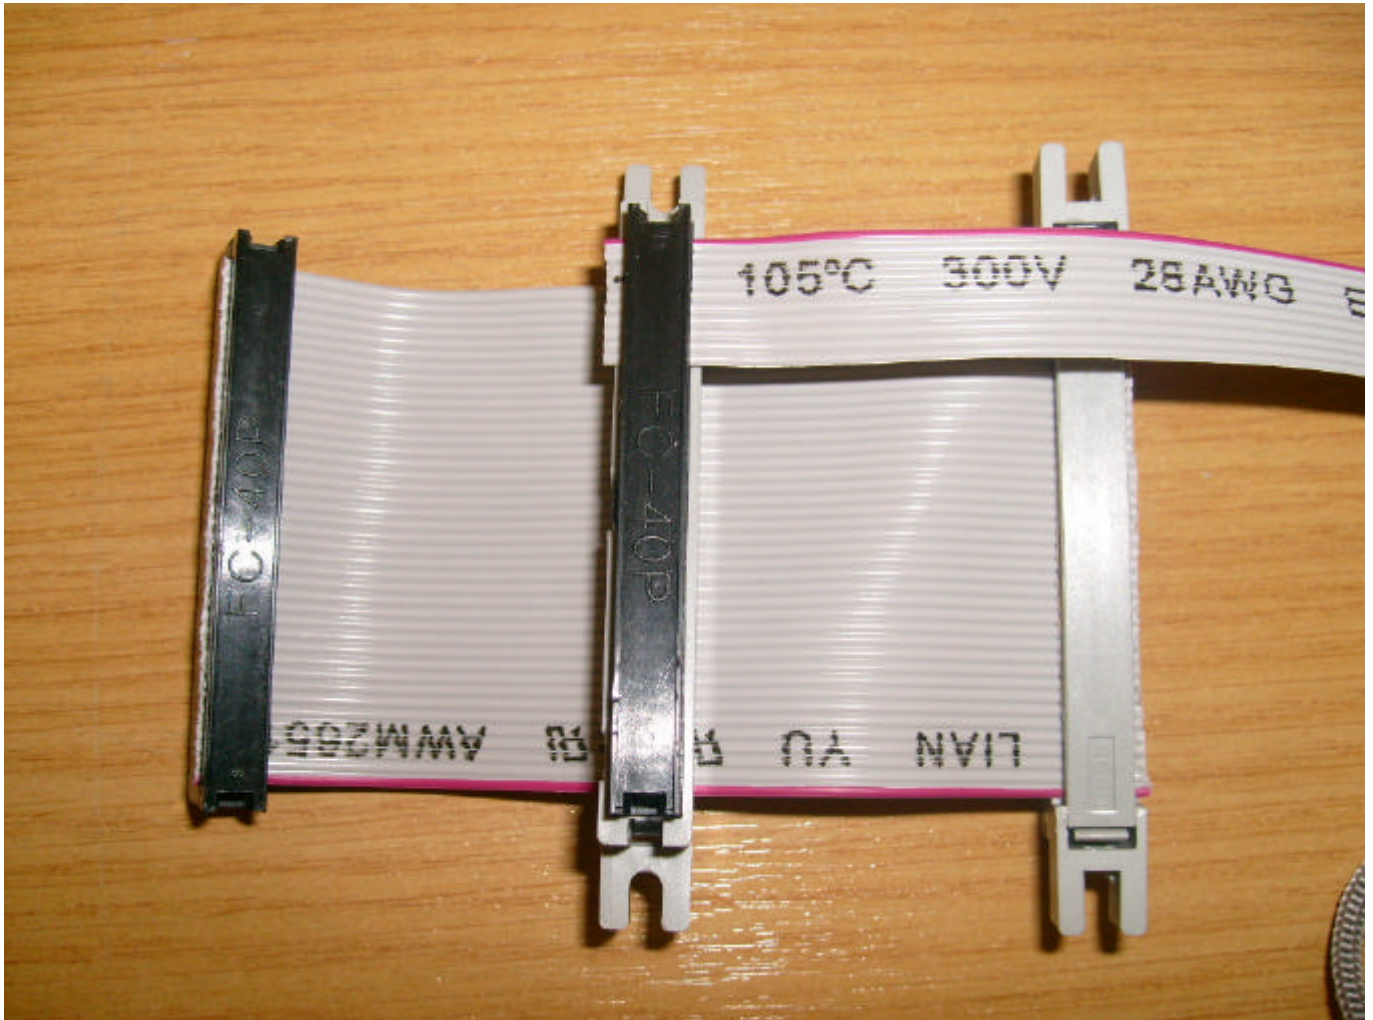


To install the cable, follow these steps:

- 1) Remove the base panel from the console below the master section.
- 2) Disconnect the 40 way ribbon cable from the power distribution pcb that is fixed to the side of the console. This is shown in its original form below:



3) Connect the ribbon cable socket from the console to the plug on the new interface cable and connect the socket on the new interface cable to the plug on the power distribution pcb.

It should now look like this:

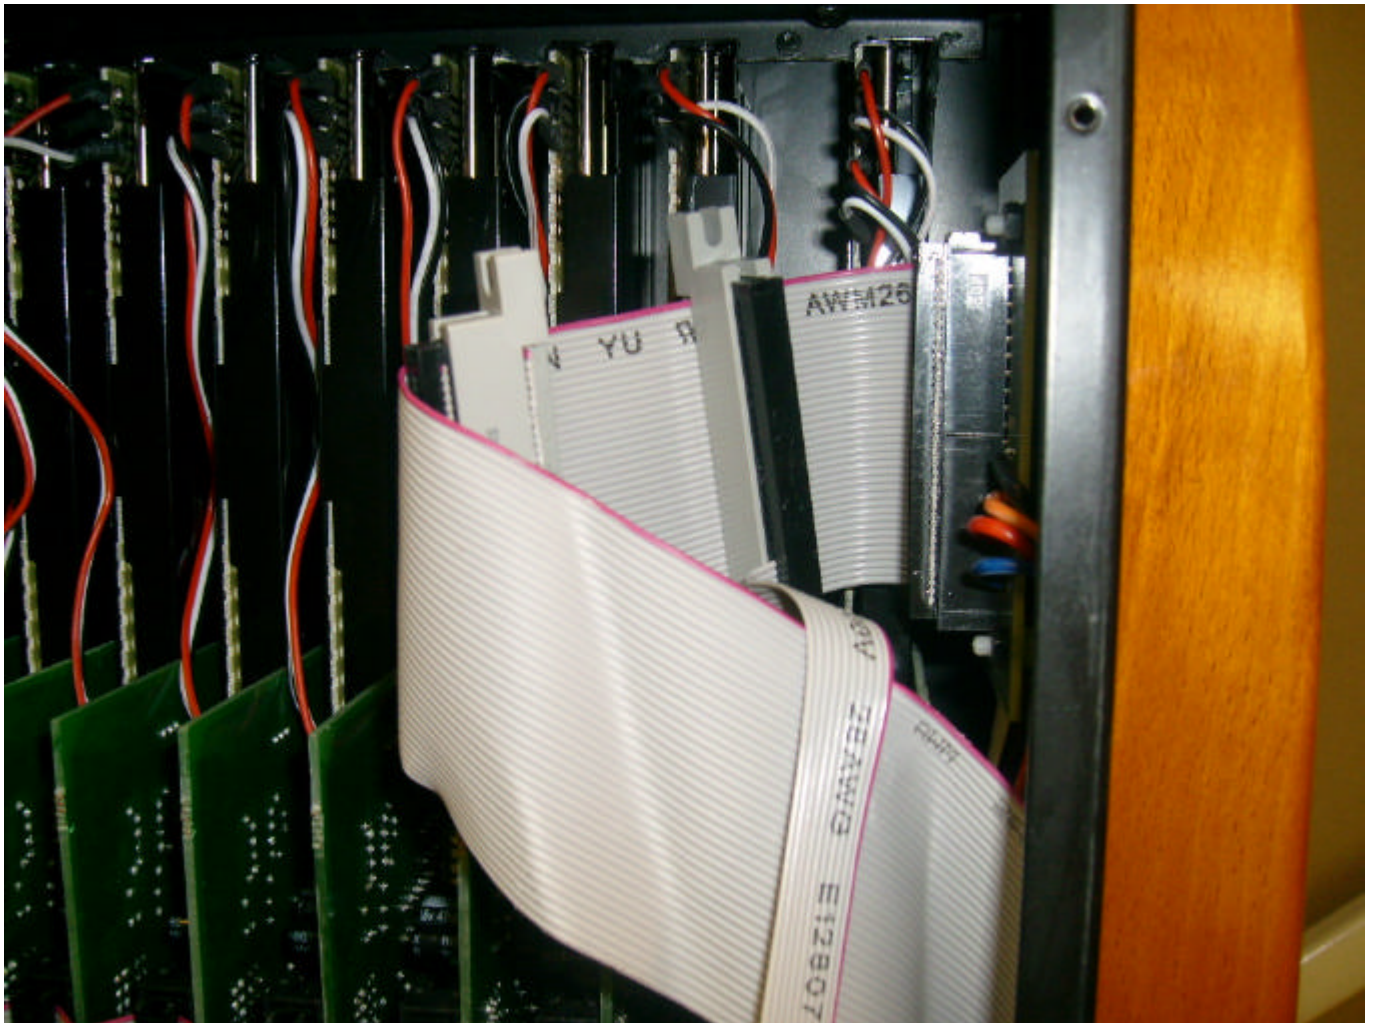

4) Position the 10 way ribbon cable to the back of the console so that when the base panel is replaced the cable will be outside of the console and in line with the 10 way socket on the meterbridge.

5) Replace the base panel and connect the 10 way ribbon cable to the 10 way socket on the meterbridge.

The power connections are now complete.